




Palm Treo 600 Logic Board Replacement

Written By: Clement Poisson

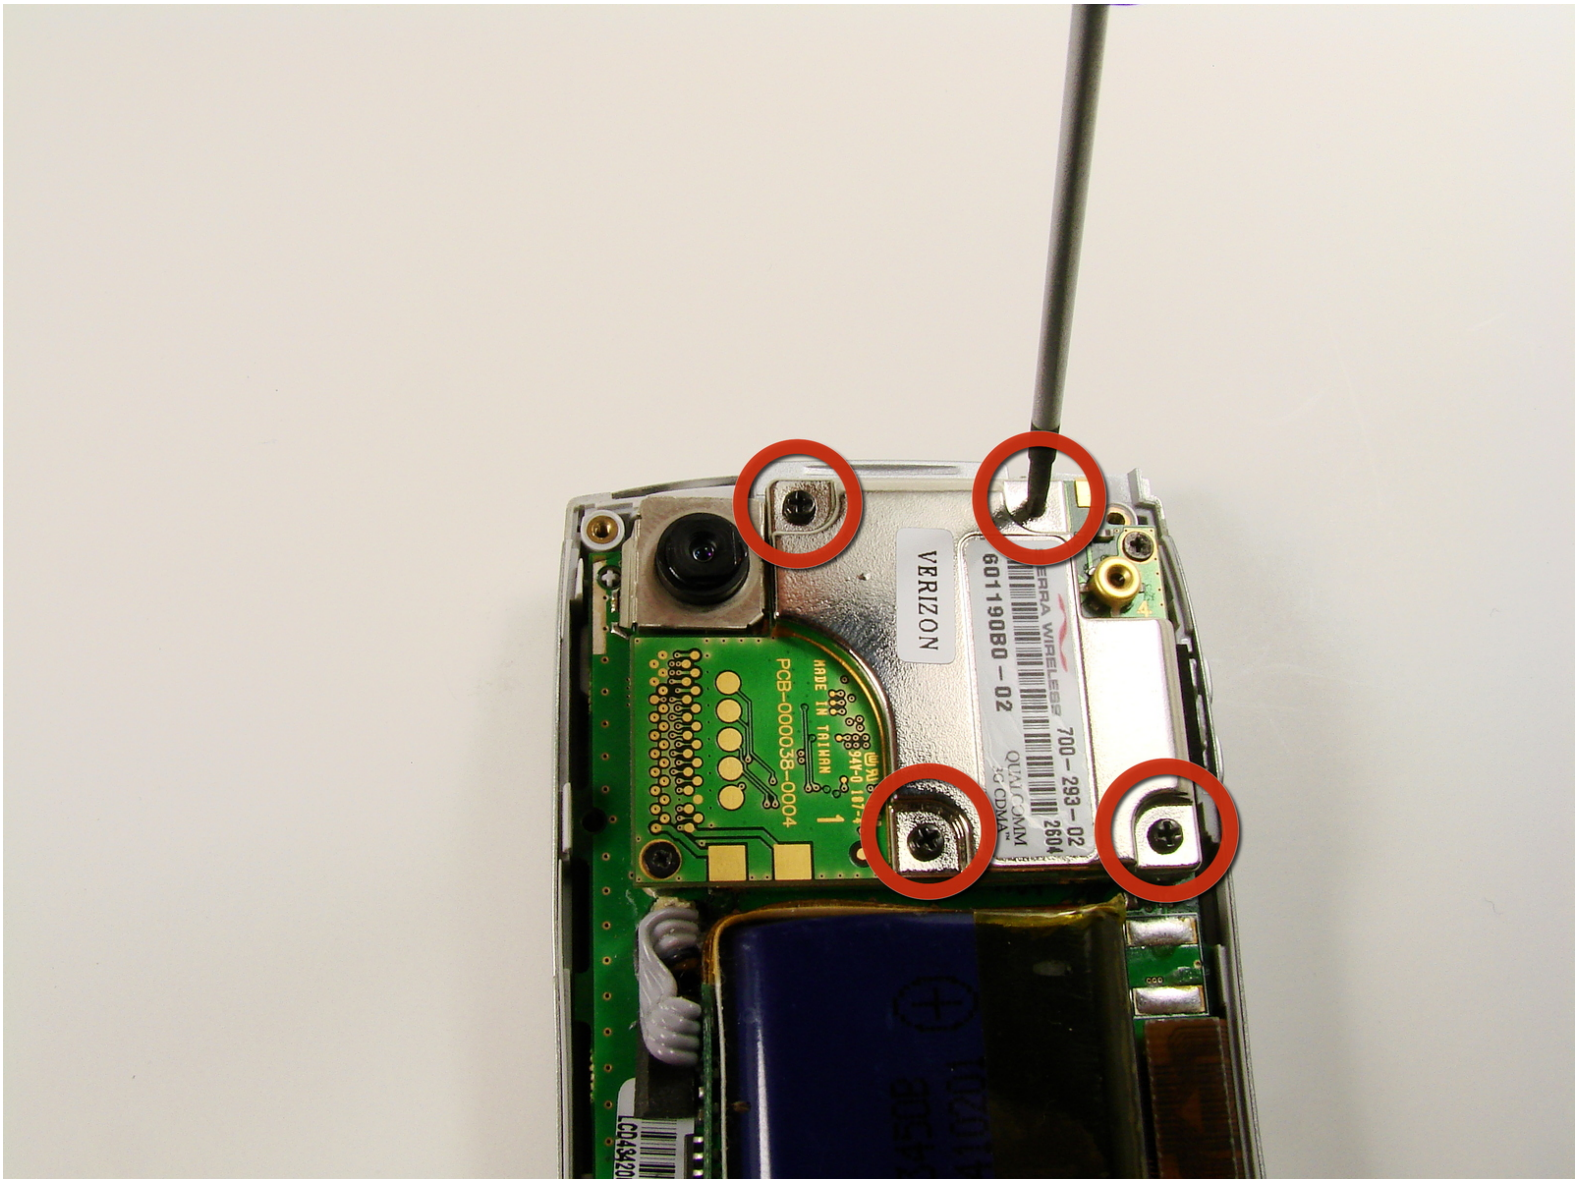

INTRODUCTION

Steps to follow if you want to replace the logic board. Also needed if you want to access the camera.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Back Case




- On the back of the device, locate the 3 rubber plugs, and use a plastic spudger to remove them.

Step 2



- Use the T6 Torx Screwdriver to remove all 4 screws.
- ⓘ You have to first remove the Stylus to access the 4th screw.


Step 3

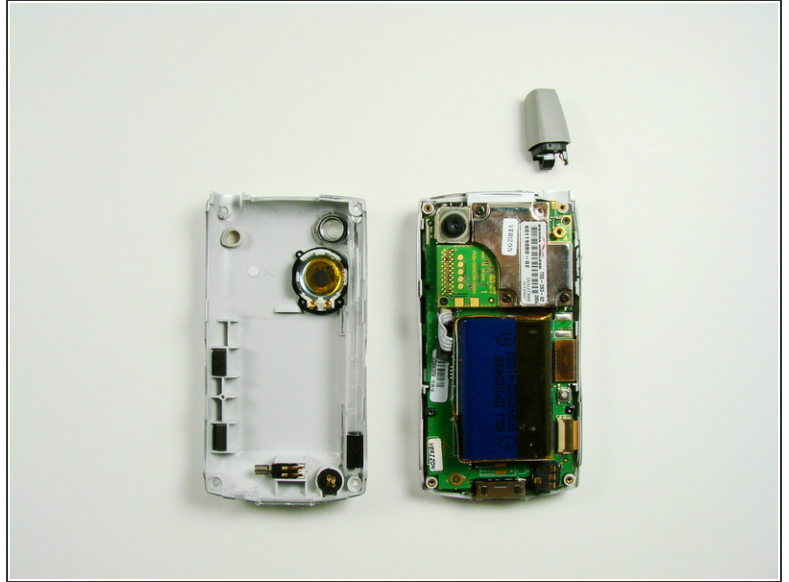

- Using a plastic opening tool, carefully separate the front and back cases.


i Note: The antenna will detach from the phone.

Step 4 — Motherboard

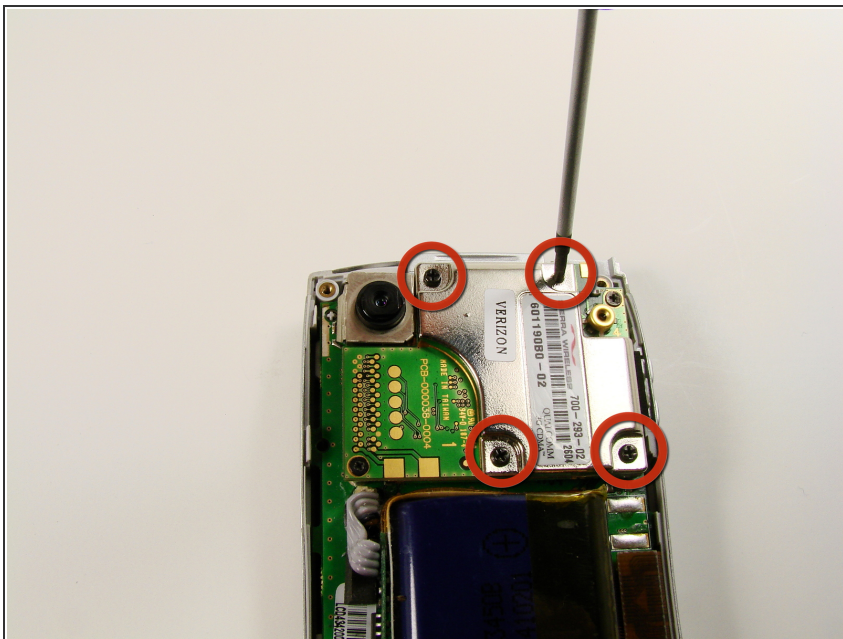

- Using the Phillips #00 screwdriver, unscrew the 4 screws holding the silver casing down.


Step 5

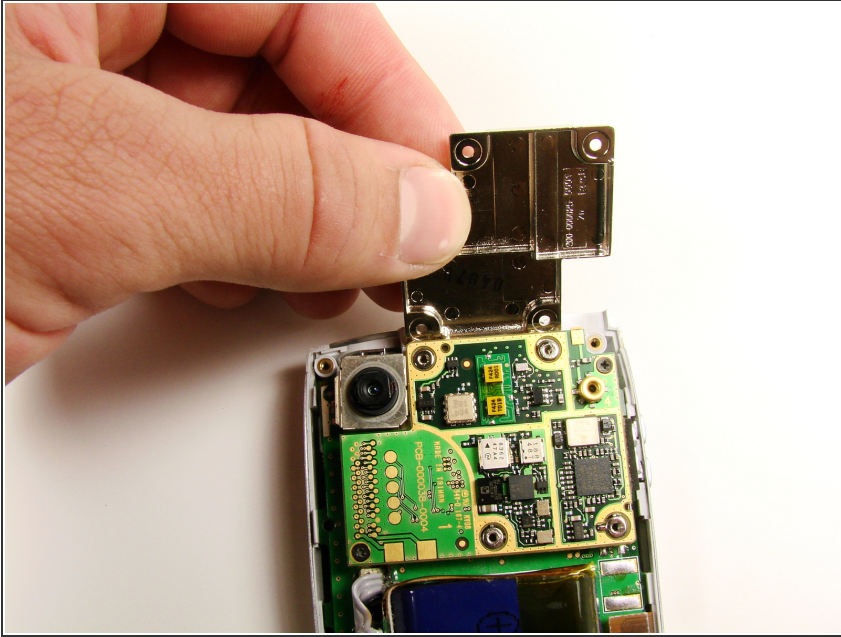

- Lift up the silver casing.



⚠ Careful! The casing is connected to the body. Pull the casing up.

Step 6

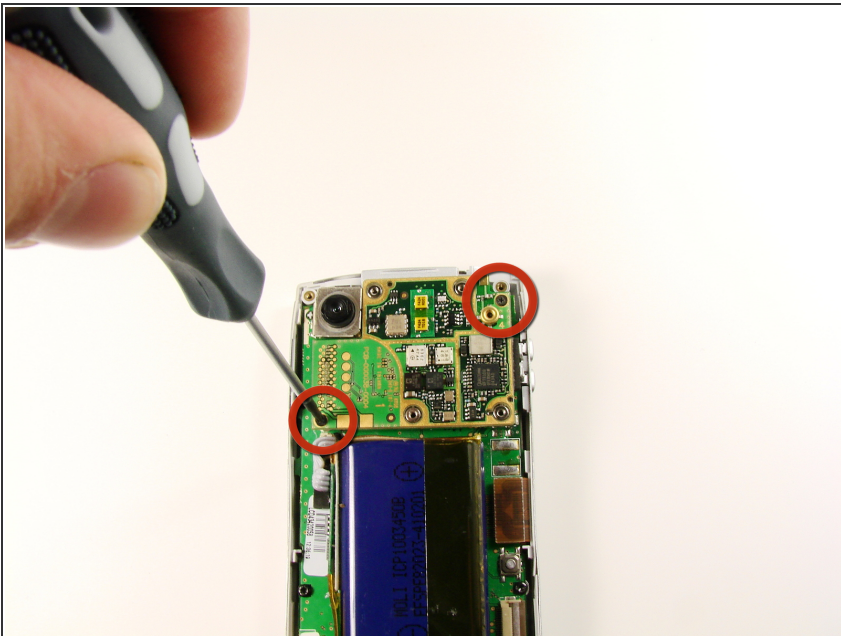

- With the silver casing removed, unscrew two black screws with a #00 Phillips Screwdriver.

Step 7

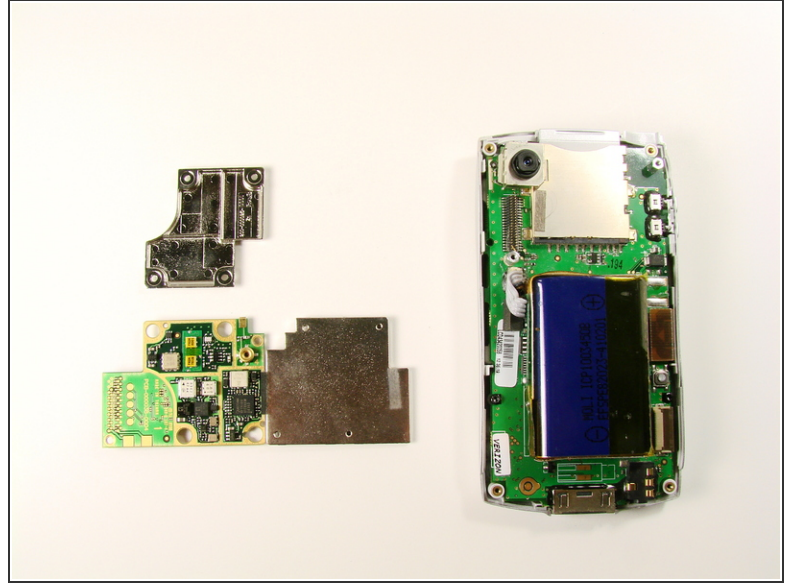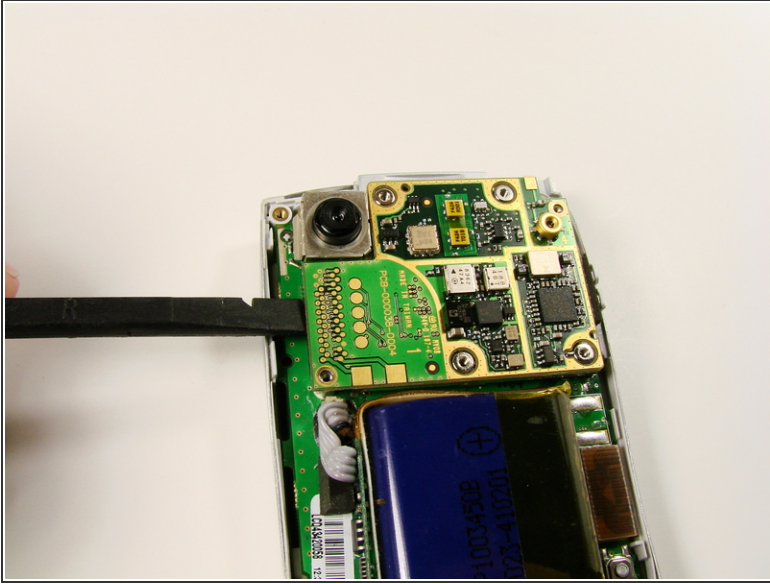

- Use the spudger to lift the logic board from its socket. Remove it from the rest of the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 10:01:49 PM.